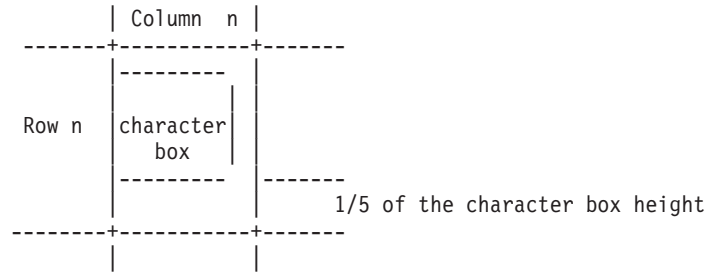

Element Type and Position

The positions of the elements have subtle differences depending on the element type.

Text Element and Position

Measurement Method is Row/Column

The left edge of the character is positioned to the left edge of the column. The bottom of the character is positioned one fifth of the character height above the bottom of the row.



Measurement Method is Inch or Centimeter

The left edge of the character is positioned to the horizontal position. The bottom of the character is positioned to the vertical position.

